


APPolo | Control™

System Overview

Revision 2.0

Last Updated December 2012

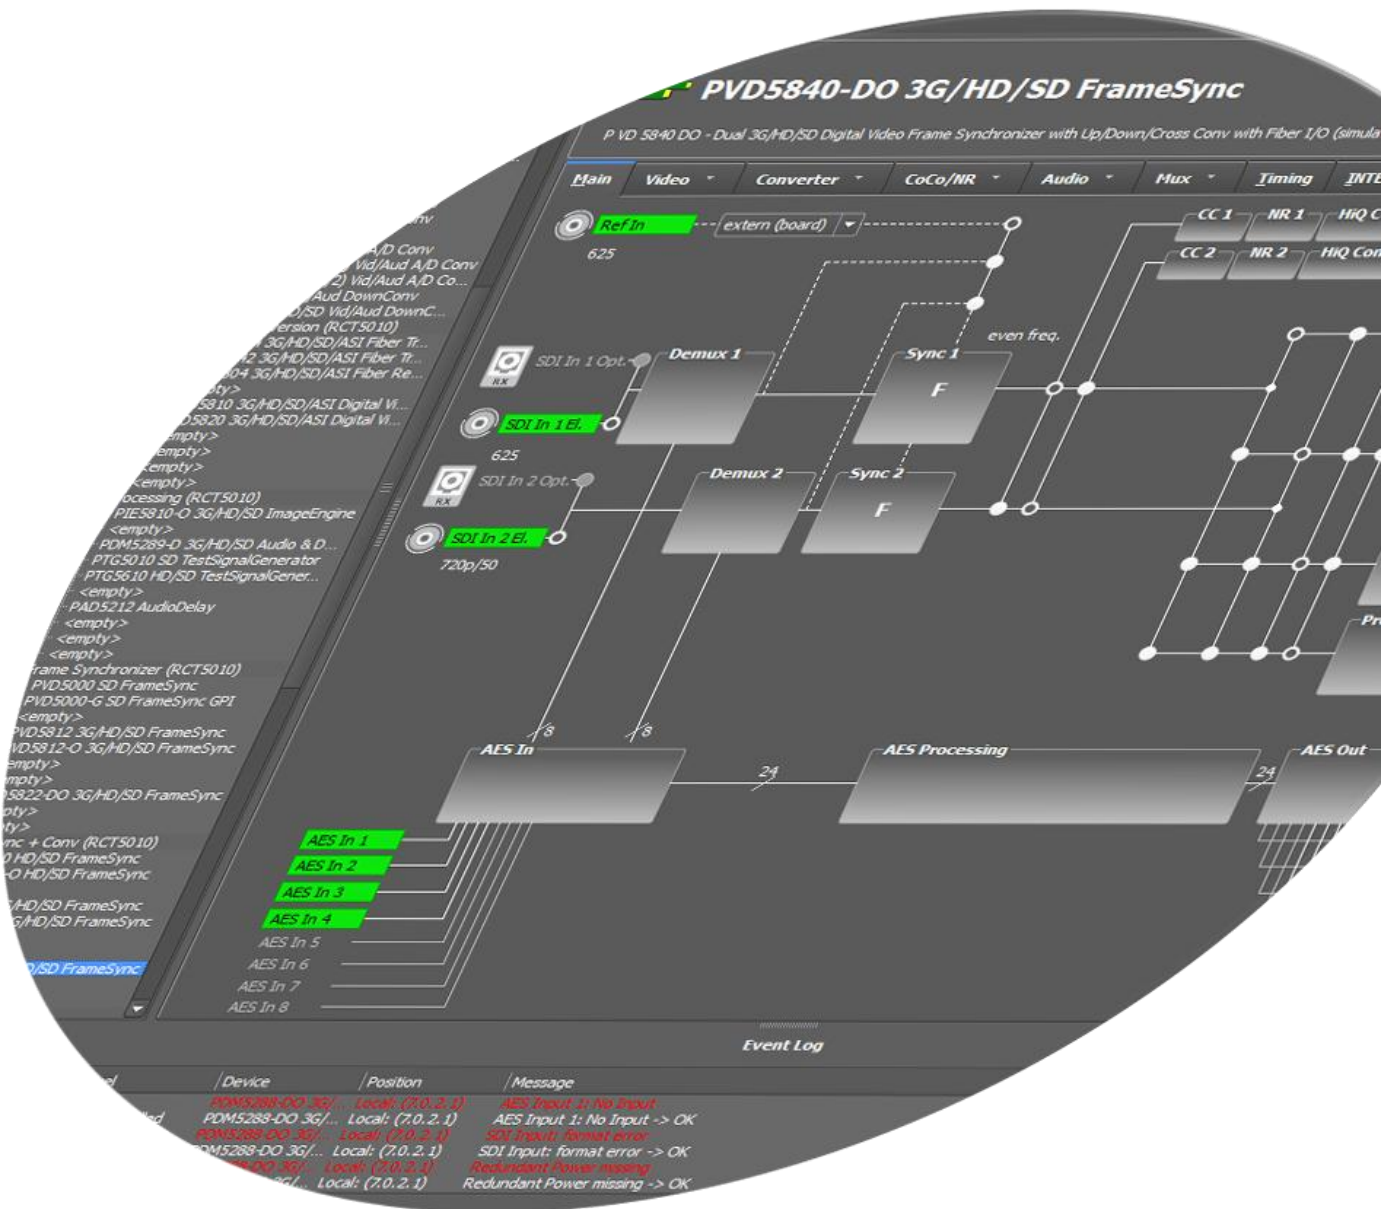

(This page is intentionally blank)

Index

| | |
|--|-----------|
| <i>LYNX Control System Overview.....</i> | <i>4</i> |
| <i>Hardware Components.....</i> | <i>4</i> |
| <i>R CT 5023 Rack Controller.....</i> | <i>5</i> |
| <i>OH_RCT5023_SERVER.....</i> | <i>5</i> |
| <i>Rack Frame Terminal Connector.....</i> | <i>6</i> |
| <i>Attachments.....</i> | <i>7</i> |
| <i>Let's build a basic system.....</i> | <i>7</i> |
| <i>Let's build a system with a server</i> | <i>11</i> |
| <i>Redundant Server setup</i> | <i>15</i> |
| <i>The LYNX APPolo Control Software</i> | <i>16</i> |
| <i>Passive Operation</i> | <i>16</i> |
| <i>Graphical User Interface</i> | <i>17</i> |
| <i>Device Tree</i> | <i>18</i> |
| <i>User defined Device Tree.....</i> | <i>18</i> |
| <i>Log Area</i> | <i>19</i> |
| <i>Control Area</i> | <i>19</i> |
| <i>Tool Bar</i> | <i>19</i> |
| <i>Locating Modules.....</i> | <i>19</i> |
| <i>Module Graphic Representation</i> | <i>20</i> |
| <i>System Events.....</i> | <i>21</i> |
| <i>Backup Solutions</i> | <i>22</i> |
| <i>Hotsync Backup</i> | <i>23</i> |
| <i>System Wide Backup</i> | <i>23</i> |
| <i>Copy & Paste.....</i> | <i>25</i> |
| <i>User Access Control.....</i> | <i>25</i> |
| <i>Update Manager.....</i> | <i>26</i> |
| <i>Test Drive the Control System</i> | <i>27</i> |
| <i>ANNEX A.....</i> | <i>i</i> |
| <i>Integration in to a legacy installation</i> | <i>i</i> |

LYNX Control System Overview

Today's modern digital multi-format installations have resulted in the development of an array of new terminal equipment products designed to address the many needs and demands of such systems. Many devices are complex multi-faceted and multi-functional modules with an array of options and configuration possibilities. A comprehensive control system has become an essential component of any modern terminal equipment installation.

LYNX Technik has always addressed this with a modular and expandable control system. The two primary building blocks of this control system being hardware components in form of modular rack controllers and a software application. Now LYNX Technik has taken the control system to the next level and simplified the hardware and in addition providing more features and flexibility.


Hardware Components

LYNX Technik used to offer three optional modular rack controllers that could be fitted into the Series|5000 2RU rack frames along with up to 10 processing cards, as well as primary and redundant power supply. The main reasons for these different types of controller cards were the cost effectiveness for larger systems and the simplicity of expansion.

These key attributes have been maintained with the new control system but now only one type of controller card with an add-on hardware option is required. As usual LYNX Technik made sure that this new controller card will work in any generation of the Series|5000 2RU rack frames.

The controller card and add-on option are shown below.

R CT 5023 Rack Controller

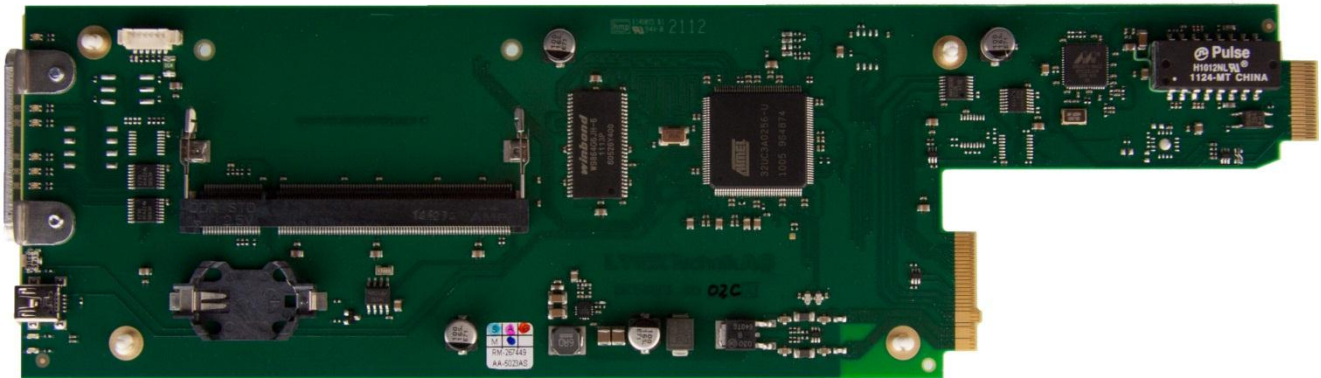

The R CT 5023 is the basic controller card and is all you need to connect a Series|5000 2RU rack frame to the APPolo Control software. The controller card has a LAN network interface that uses the LAN connection on the terminal plate of the rack frame. All LAN related settings are stored on an internal flash memory. Each controller card in one system needs to have an individual IP-address.

OH_RCT5023_SERVER




The OH_RCT5023_SERVER option is an independent Linux Server with its own IP-address. For power and LAN connection it is clipped as a piggyback onto the R CT 5023 controller card.

Adding the OH_RCT5023_SERVER option to a system, enables features like full SNMP support, Backup-Restore for the complete system and many more.

Rack Frame Terminal Connector

The diagram below shows the control system terminal panel connections and where they are located on the rear of the rack frame. All rack frames are supplied pre-wired for the control system.

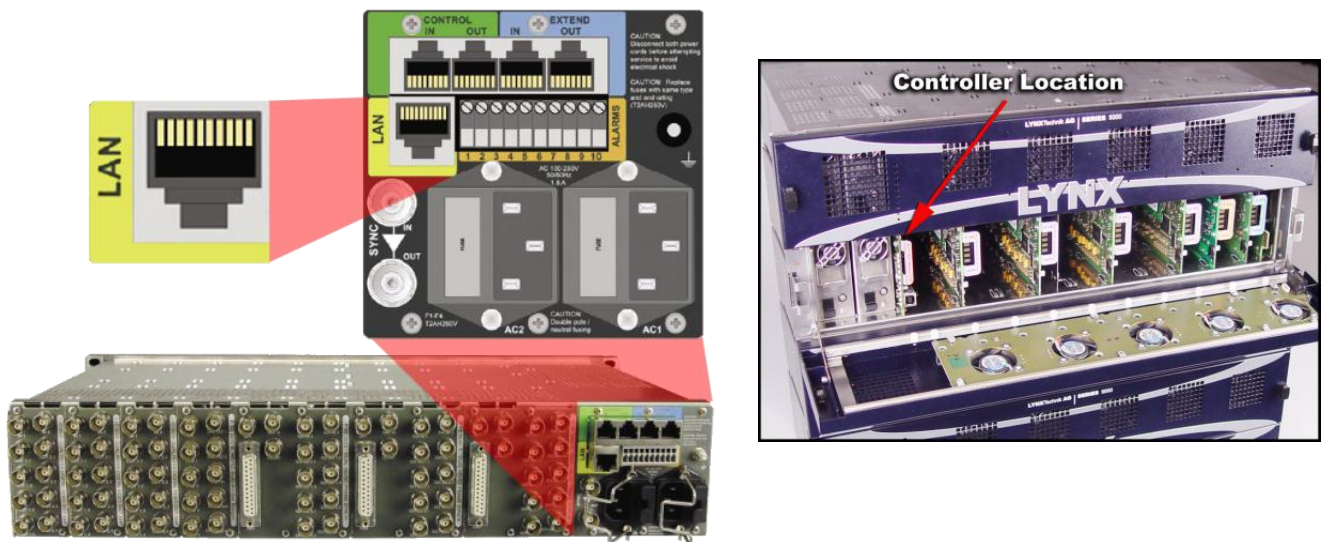

The rack frame terminal connector has a total of five RJ45 connectors. Depending on the type of controller that is inserted into the frame, these connectors are active or not. However, now with the new R CT 5023 controller card design, the top four connectors that are highlighted green (Control I/O) and blue (Extend I/O) are only required for legacy controller cards (for details regarding legacy controllers please read the Control System Overview Rev 1).

As the R CT 5023 controller is IP based, the only connector of interest here is the LAN connector highlighted yellow.


Attachments

The complete infrastructure with the R CT 5023 is IP based. Therefore, the physical interconnection between rack frames and computer is established by using an IP-Switch. However, in the IP world having a physical connections isn't enough. The components need to communicate with each other which require a logical connection (i.e. in addition to the physical connection, the network components need to be logically attached to each other).


Let's build a basic system

To show how a system is initially configured and how it can be expanded, we will go step by step through the configuration process answering questions along the way. We will start with a very simplistic and minimal system of one Series|5000 rack frame with an R CT 5023 controller card.

First of all, the physical IP connections between the PC and the frame need to be established. In other words, both components need to be connected to the IP network.

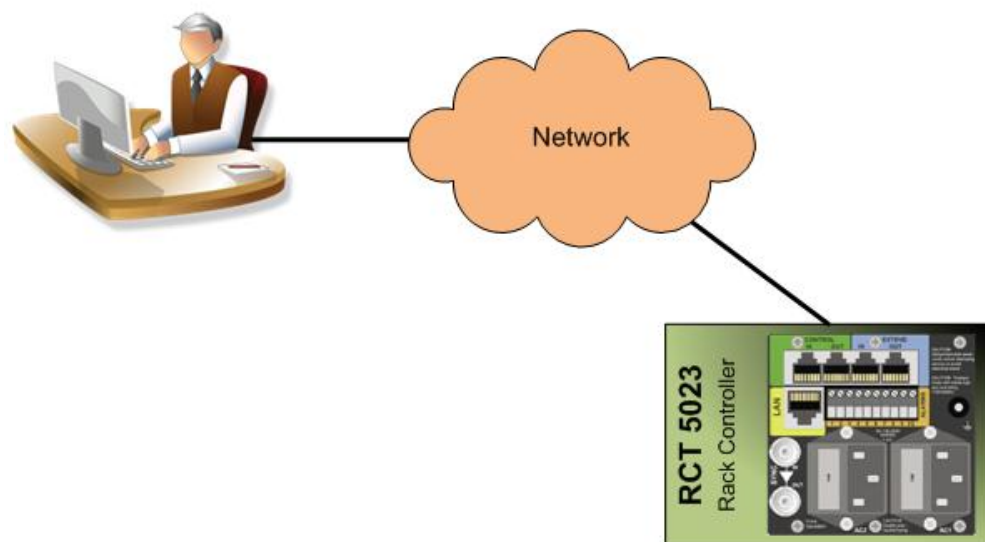


Now the PC and R CT 5023 need to be logically attached to each other. The simplest way of doing this is by using the LYNX APPolo GUI software which can be downloaded from the LYNX Technik AG homepage (www.lynx-technik.com) for free.

After installing and starting the APPolo GUI, open the "Connection Manager" dialogue (you will find it in the "tools" menu or simply click the symbol  in the tool bar). In order to establish an attachment (i.e. logical connection) of the controller card to the PC, you need to make sure that the IP addresses of the PC and controller card are compatible.


The "Network Component Configurator" tab of the "Connection Manager" dialogue provides a very powerful tool to overview and setup the IP configuration of all the LYNX component in your network regardless of their current IP settings.*

After you have made sure that the IP addresses are correct, go to the "Network Connections Editor" tab. On the right hand side of this dialogue, all the available LYNX components in the network will be listed. On the left side, you have an overview of all the current attachments within the LYNX system.

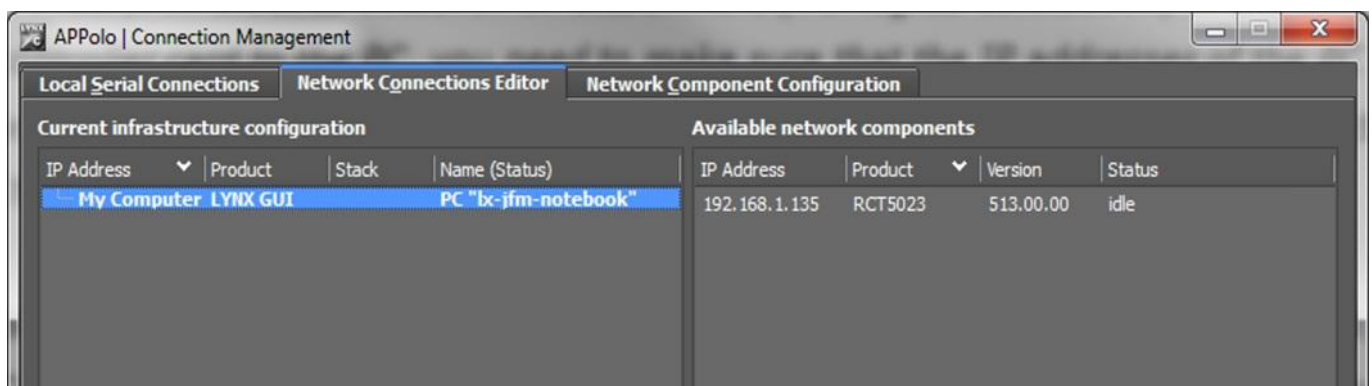


*For detailed descriptions on the "Network Components Configurator" and alternative ways of adjusting the LAN related settings of the controller card, please refer to the R CT 5023 manual.


*To attach the controller card to the PC, simply select the designated controller in the right column and drag & drop it on to "My Computer" in the left column.
Finished! Now you have attached the R CT 5023 controller to the APPolo Control software.*

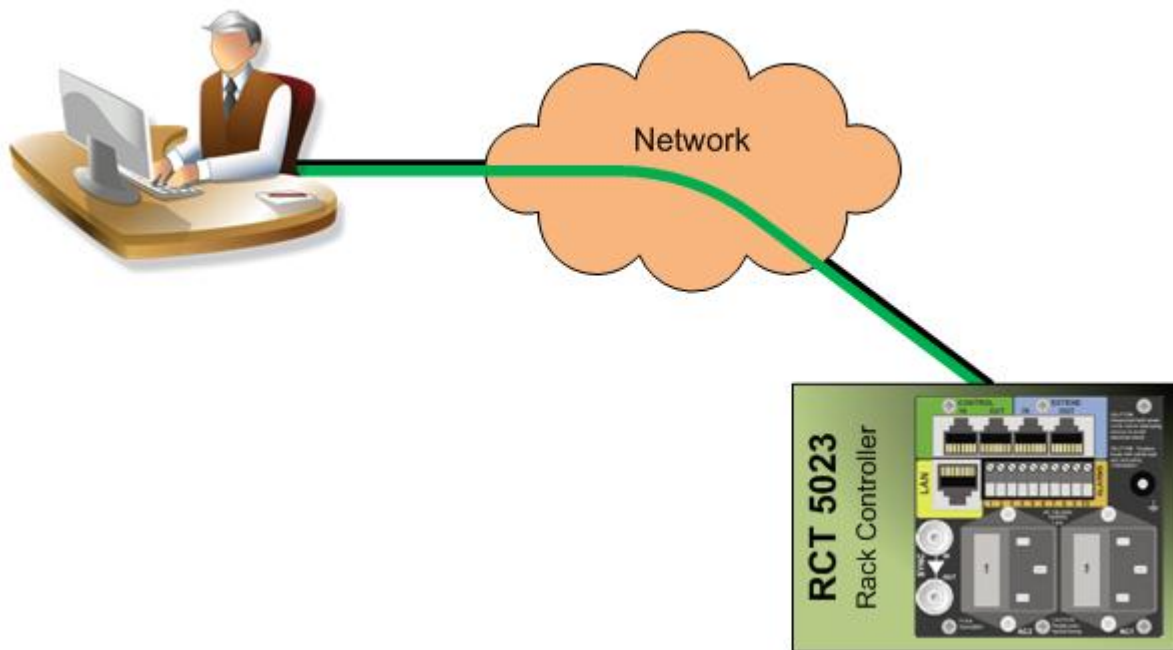


The "Current infrastructure configuration" column will now show the connection between your PC and the controller card.

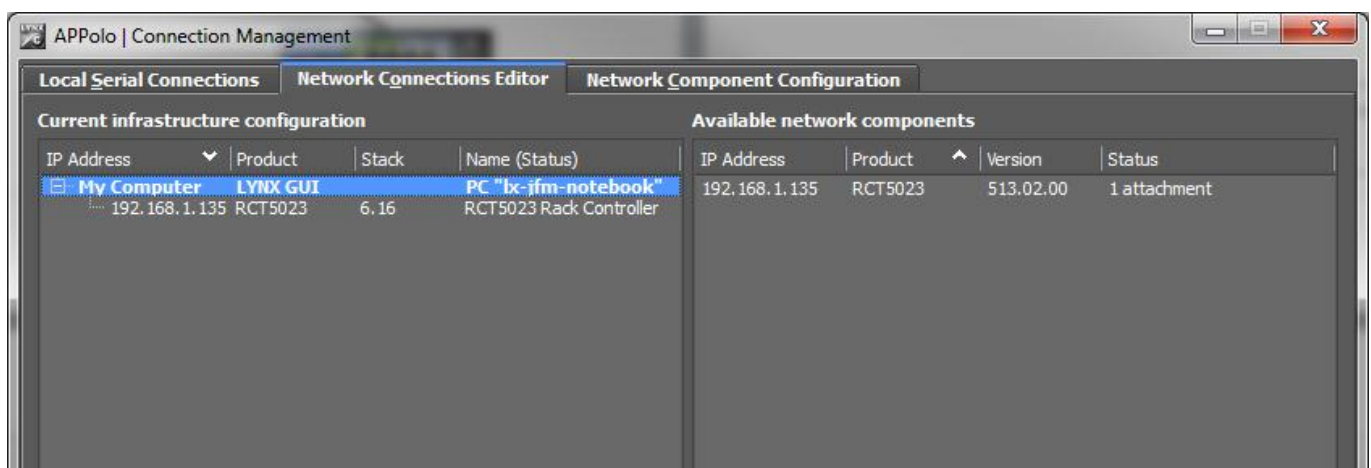

Adding more frames is just as easy. When more than one frame with an RCT 5023 controller is physically connected to the same network, they will be listed in the "Available network components" column. Once again, drag & drop the controllers you want to attach to your PC from the right column on to "My Computer" in the left column.

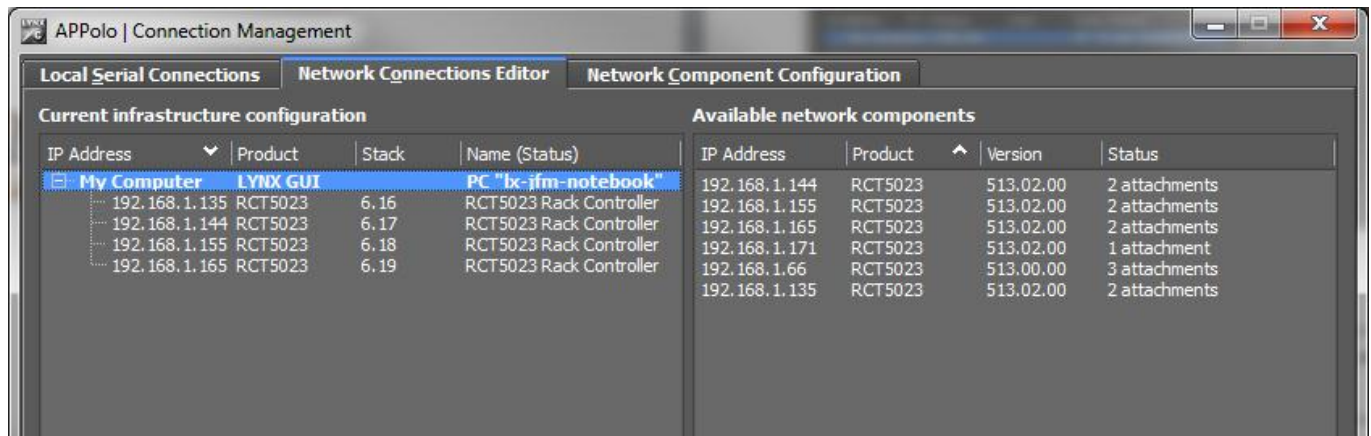

The logical interconnection of this system looks as follows:

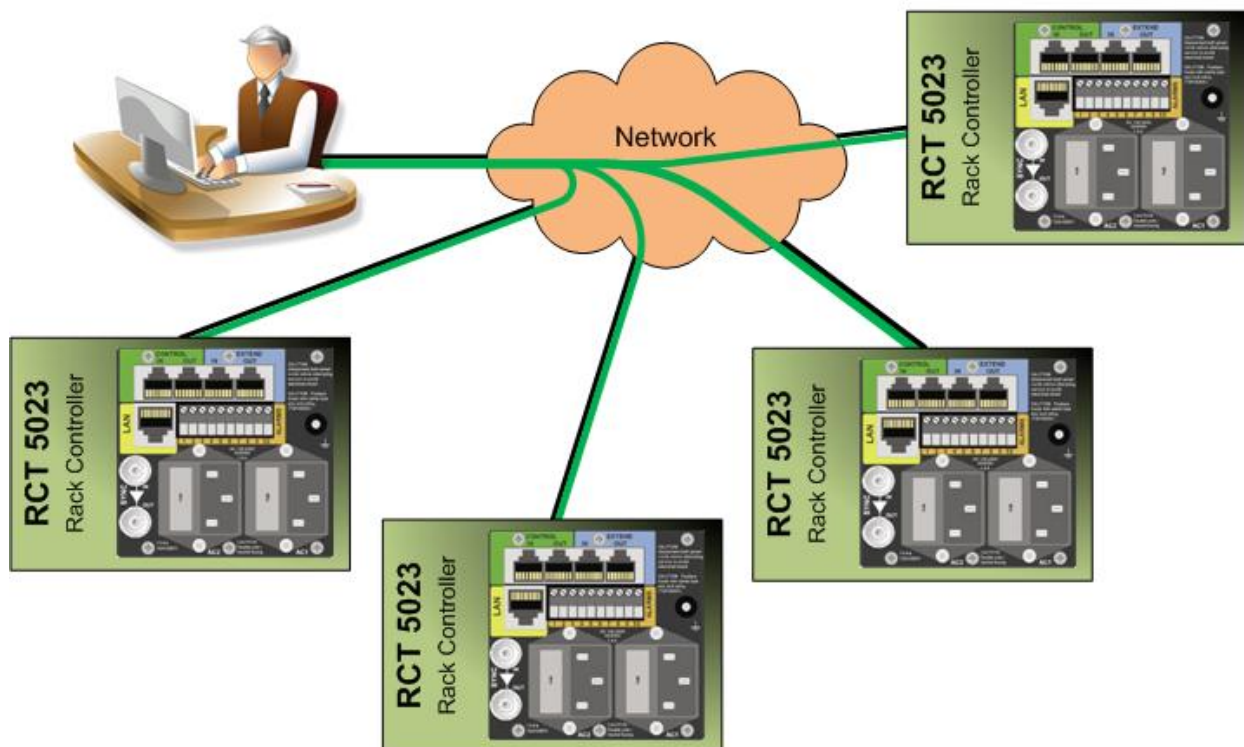


Let's build a system with a server

A direct attachment from a frame with an R CT 5023 controller to the PC running the APPolo GUI software is fine to setup the individual processing modules within those frames.


Sometimes however, a more elaborate control system is required. For example if you need a constant logging, want to remote control the LYNX equipment via a third party soft- or hardware, SNMP or the LYNX IP remote control protocol (API) is needed. Another scenario would be if you want to store and restore the settings of all the processing modules within the system. In this case you would require the LYNX Backup/Restore function. These and many other features are part of the OH_RCT5023_SERVER option.

As briefly described at the beginning of this document, the OH_RCT5023_SERVER can be added to an R CT 5023 controller card.

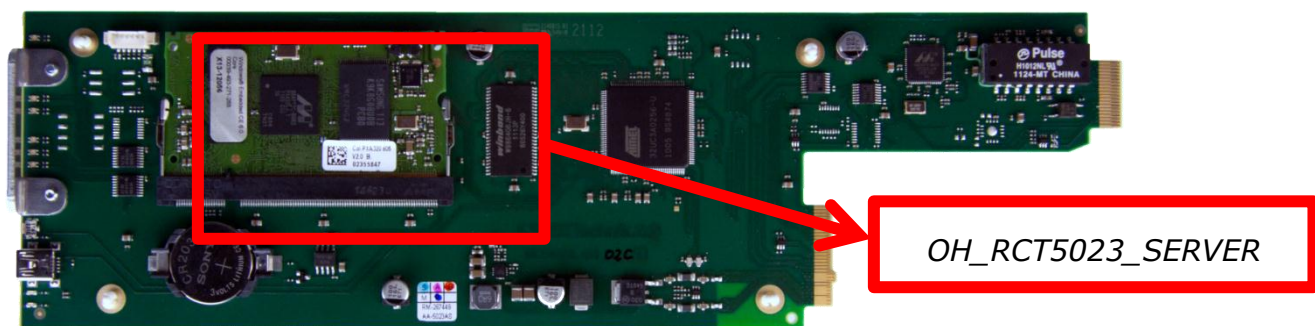


However, despite this option being clipped to a controller card, it is a completely independent network component. The only reason it is clipped to the R CT 5023 controller card is because the server uses the controller as power source and as a gateway to the network (i.e. it uses the same LAN connection as the controller card but has a different IP address).


The physical connection of the frames stays the same, even for the frame hosting the RCT 5023 controller card with the OH_RCT5023_SERVER option clipped to it.

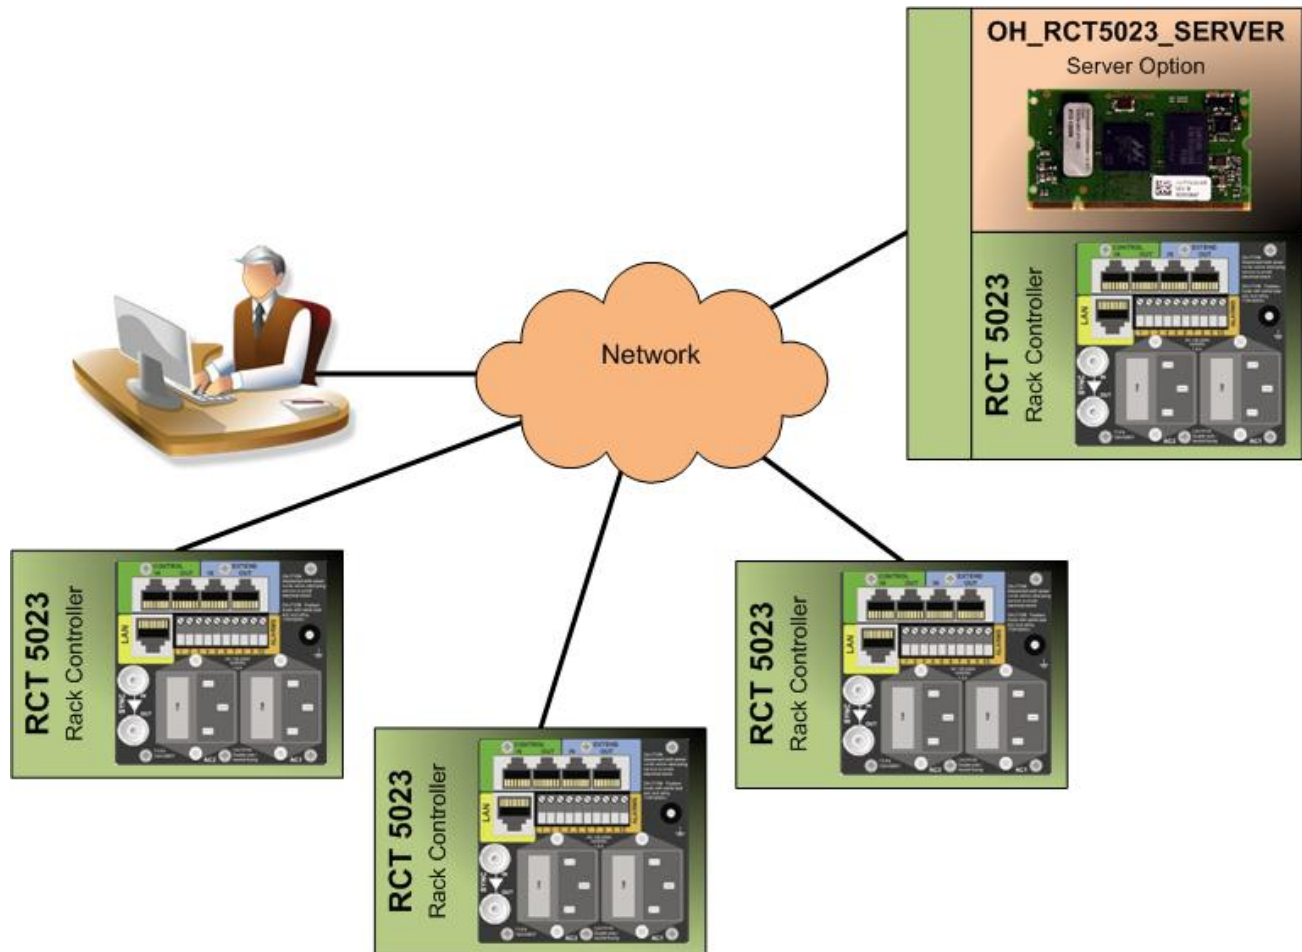


In the "Network Connections Editor" tab of the "Connection Manager" dialogue, you will now see the server highlighted with a bold font.

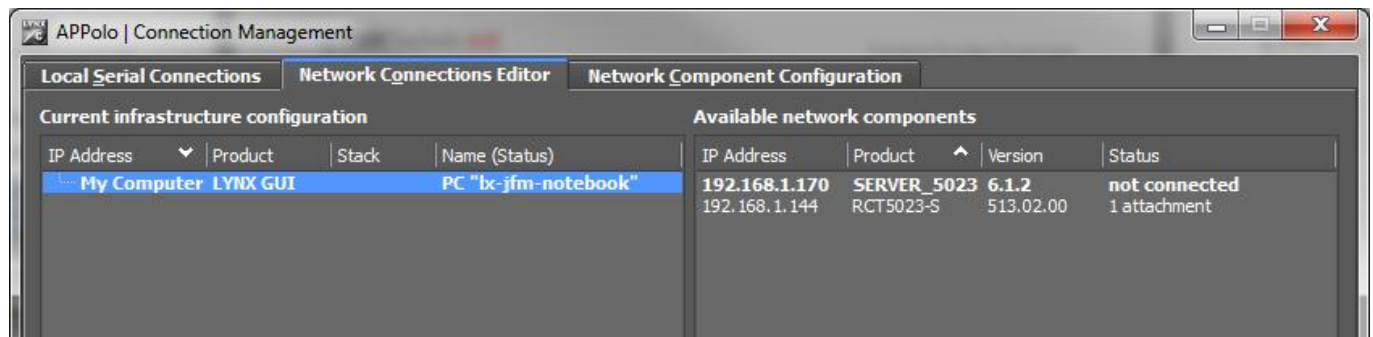

To setup the connection, first drag & drop the server entry from the right to the left column.

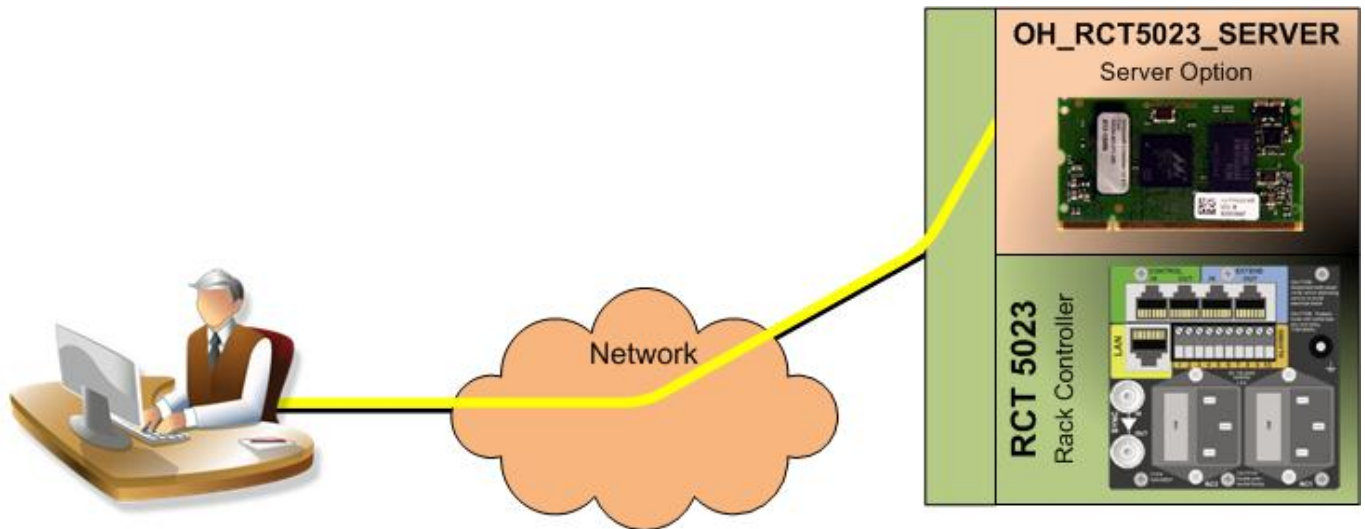


The logical connection between the APPolo GUI running on your PC is established. Now drag and drop the R CT 5023 controller card from the right to the left column but drop it onto the server entry in the "Current infrastructure configuration" column.

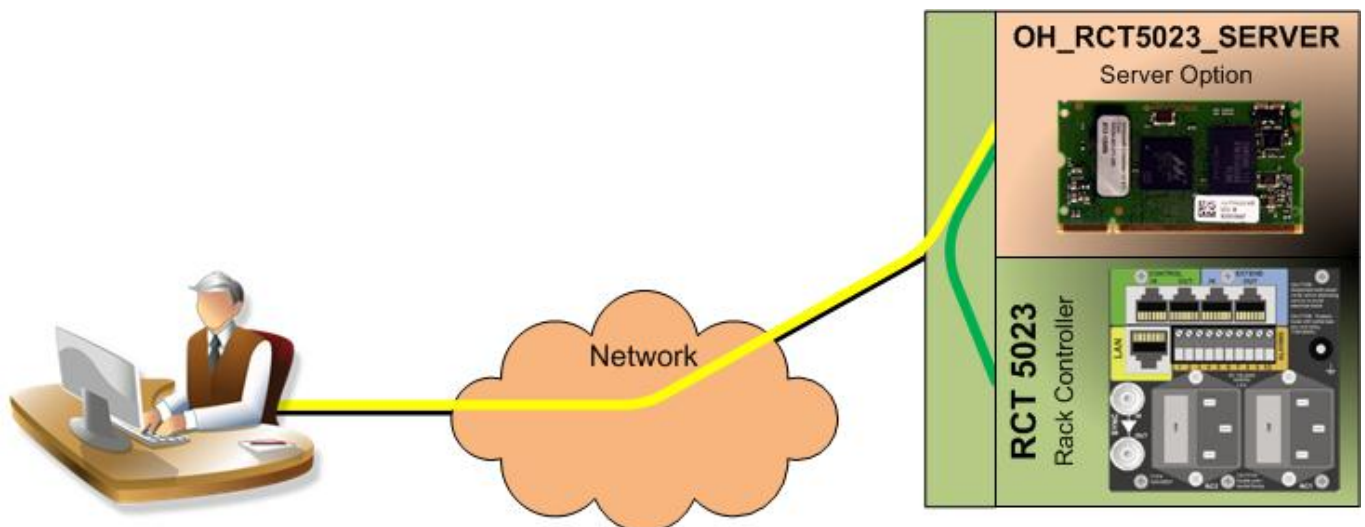


The R CT 5023 is now attached to the OH_RCT5023_SERVER.

In the "Network Connections Editor" this setup will be displayed as follows:

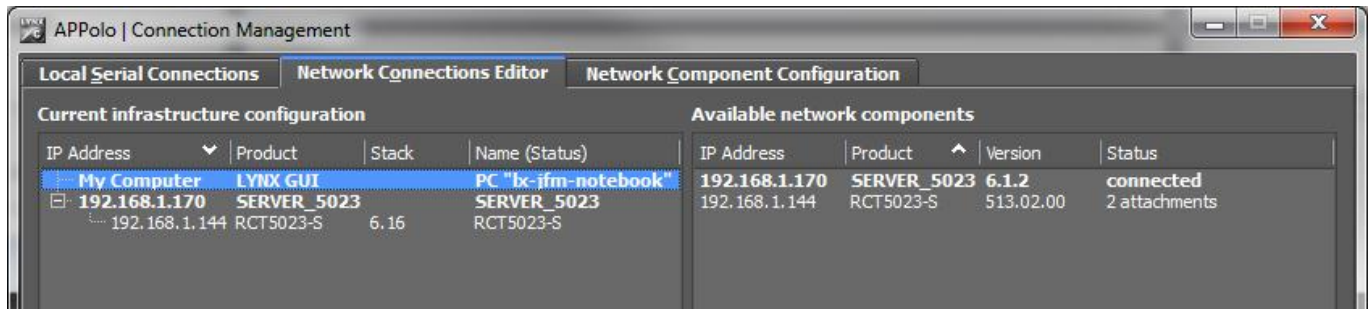


You can attach multiple RCT 5023 controller cards to this server. Attaching the controller cards to the server and not directly to the PC running the APPolo software, makes the additional server functionalities available for these controllers.

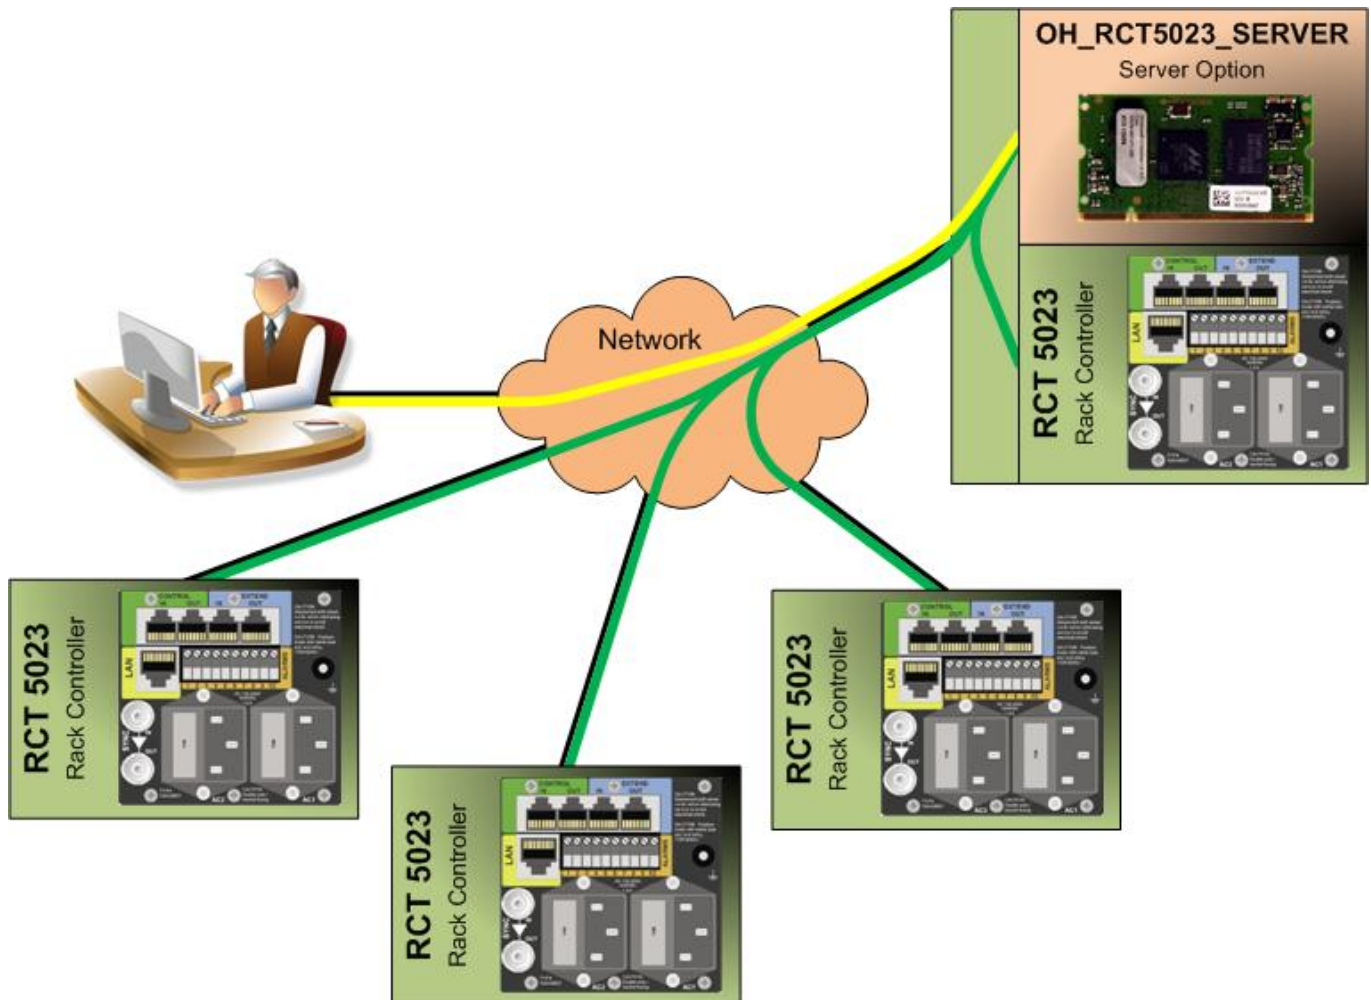

Redundant Server setup

Due to this very flexible way of attaching R CT 5023 controller cards to a server, it is really easy to setup a redundant server system. Simply clip an additional OH_RCT5023_SERVER board to any of the other R CT 5023 controller cards. Now all you have to do is to additionally attach all of the controller cards in your system to the new server. As the controller cards hosting the OH_RCT5023_SERVER options are completely independent from the server, even these can be attached to two different servers in the system.

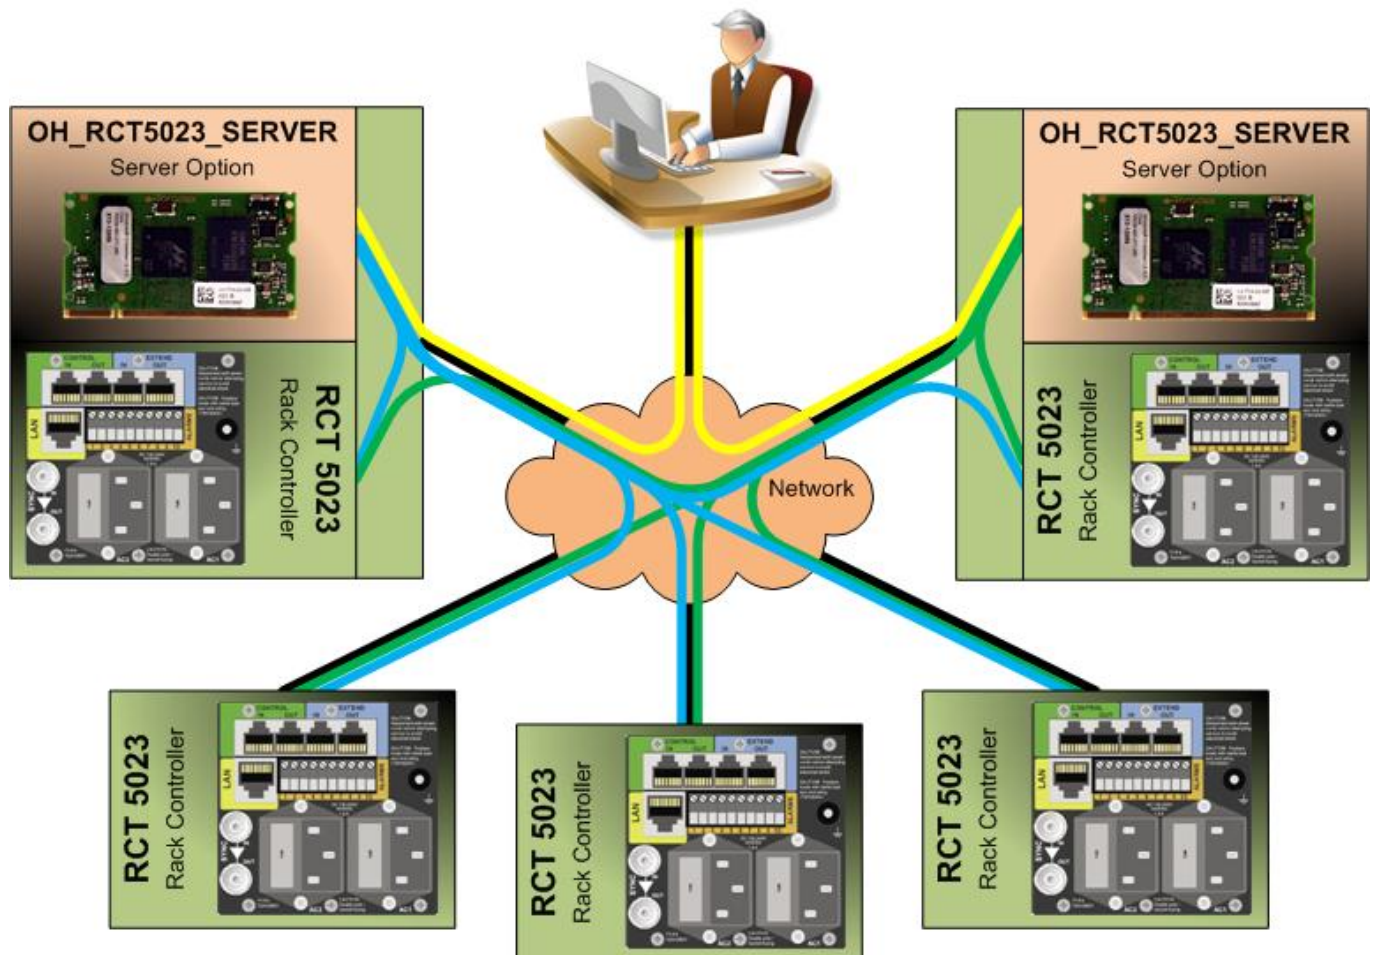

The LYNX APPolo Control Software

The APPolo Control Software is the heart of a centralized control system. It is a Windows based application and can be run on any Windows PC (Windows XP SP3 / Windows 7). The basic software package is supplied at no charge, and can be downloaded from the LYNX website (www.lynx-technik.com). Several software plug-ins are available (by license) for the OH_RCT5023_SERVER option, which add additional features. The basic software is a fully featured package with no limits on system size, and for most applications the optional features are not required. The software plug-ins provide the following additional functionality:

OC_RSL_FUNC

- *System wide backup and restore of module settings (Backup/Restore)*
- *Each parameter in the system can be made available or not for individual users (User Access)*

OC_RSL_CTRL

- *Full "Simple Network Management Protocol" support (SNMP)*
- *LYNX IP Remote Control Protocol (API)*

Passive Operation


The control system software application and hardware are completely passive in nature. All settings for the modules are stored in the individual modules Flash RAM. Nothing is stored in the PC. The APPolo Control software application and controller hardware merely provide a mechanism to view and change the settings stored within the individual modules Flash RAM.

Should a PC running the control system crash, a network error is encountered, or an R CT 5023 hardware completely fails, there will be no impact on the modules normal operation and settings.

This passive design philosophy was deliberate as terminal equipment is typically used in critical applications where continuity of use and reliability is paramount. The passive nature essentially isolates the control system from normal operations as critical a point of failure.

Graphical User Interface

The Graphical User Interface (or GUI) is intuitive and designed to be used on a Windows PC and can be driven almost exclusively with a mouse and pointing device. The layout is shown below:

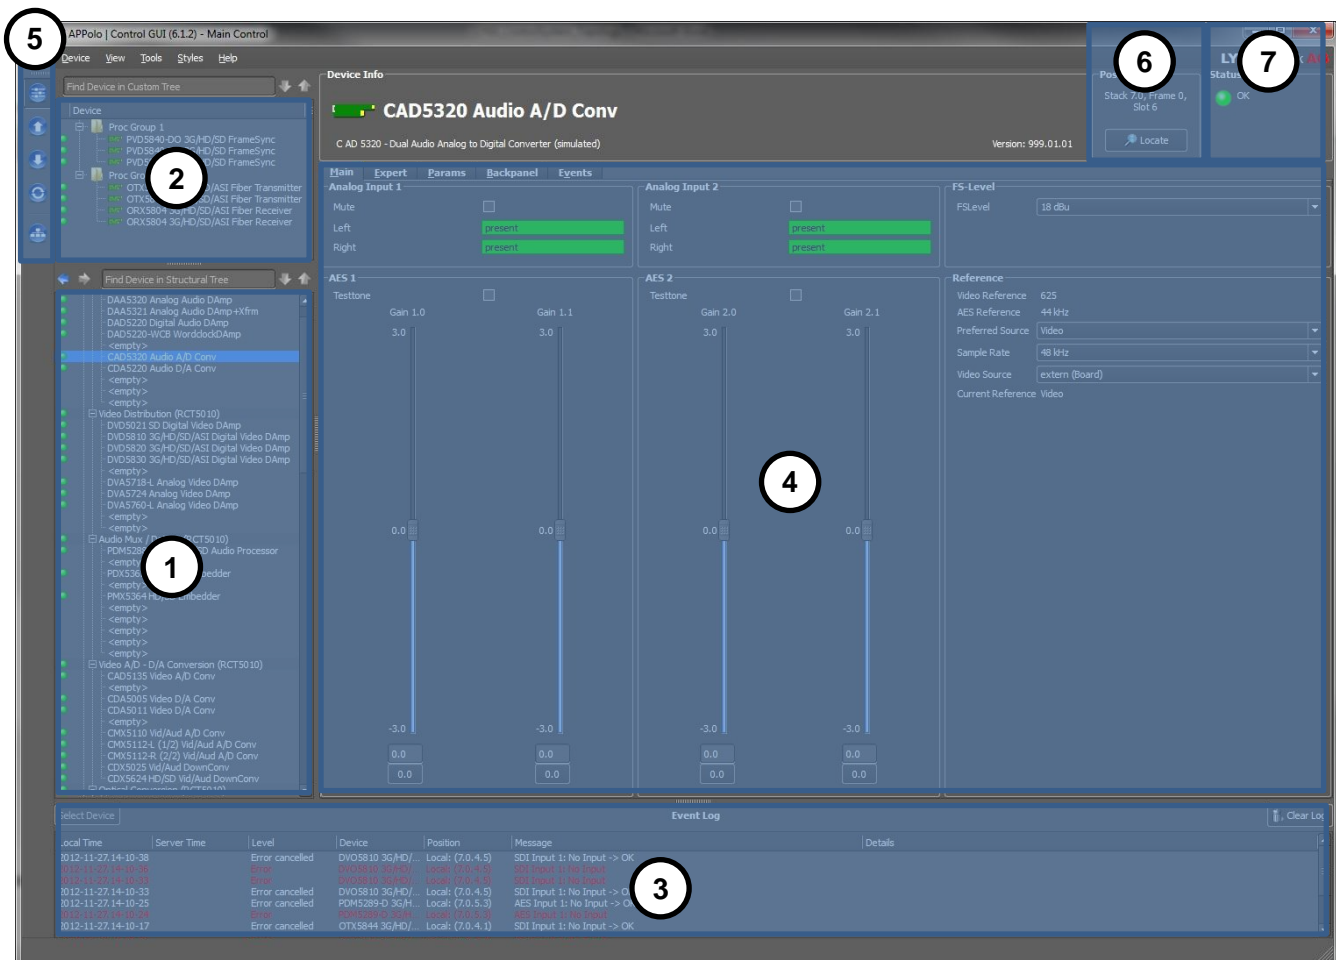

Device Tree

The left hand side of the GUI is dedicated to the device browser where all racks and modules are listed by hierarchy (1). This is the main navigation area in which you can select any of the processing modules as well as controller cards attached to your system. The names of each individual module can be customized to fit your application, simply by right clicking on the module and selecting "Rename". The customized names are stored on the server (or PC if the R CT 5023 are connected directly without a server) together with the slot position and board type. Therefore, even if you replace the module with the customizer name will remain.

To the left of each device entry is a colored circle – green, yellow, or red, and is a direct representation of the general alarm LED located on the front of module.

When the module is selected in the device browser you will see this alarm displayed in the top right hand corner of the GUI(7), where the specific error message is also displayed. If configured as an event to record in the error log, the error message will also be time stamped and recorded.

User defined Device Tree

The top part of the browser showing folder symbols (2) is the so called "User Defined Device Tree". In this area you can built your own additional device tree that is independent from hierarchy and can be made to fit exactly your application. Especially in larger systems this is very useful, as there may be subsets of modules, which require frequent access.

Building the "User Defined Device Tree" is as simple as can be. Right click into the "User Defined Device Tree" area to create a folder. To add a device, simply drag & drop it from the standard device tree into the "User Defined Device Tree".

Log Area

The lower window which spans the bottom of the GUI (3) is the log area where any fault conditions are logged and time stamped. To quickly access one of the modules that caused a log entry, simply right click on the log entry in question and press "Select Device".

Control Area

The main body of the GUI (4) shows the specific controls of the module selected in the device tree or the "User Defined Device Tree". To keep the control area as simple as possible and depending on the complexity of the module, the controls are grouped on different tabs.

Tool Bar


On the far left of the GUI (5) the tool bar is located which provides short cuts to the different sections of the APPolo GUI (e.g. the "Connection Management" dialogue as described previously).

Locating Modules

In larger systems a problem may develop with a specific module which requires some attention or maintenance. With multiple racks in a machine room, which in turn may contain many types of the same module, the process of physically locating the correct device can be daunting, especially if the system is live. The last thing you would want to do is remove the wrong module. We provide a simple solution for this within the control system. Each module has a "locate" button at the top right of the GUI (6), and clicking on this button will flash the module alarm LED yellow making it simple to physically locate the device. The alarm LED can be seen with the rack front panel closed.

Module Graphic Representation

For the more complex modules it's very advantageous to graphically represent the modules internal signal processing and indicate signal flow.

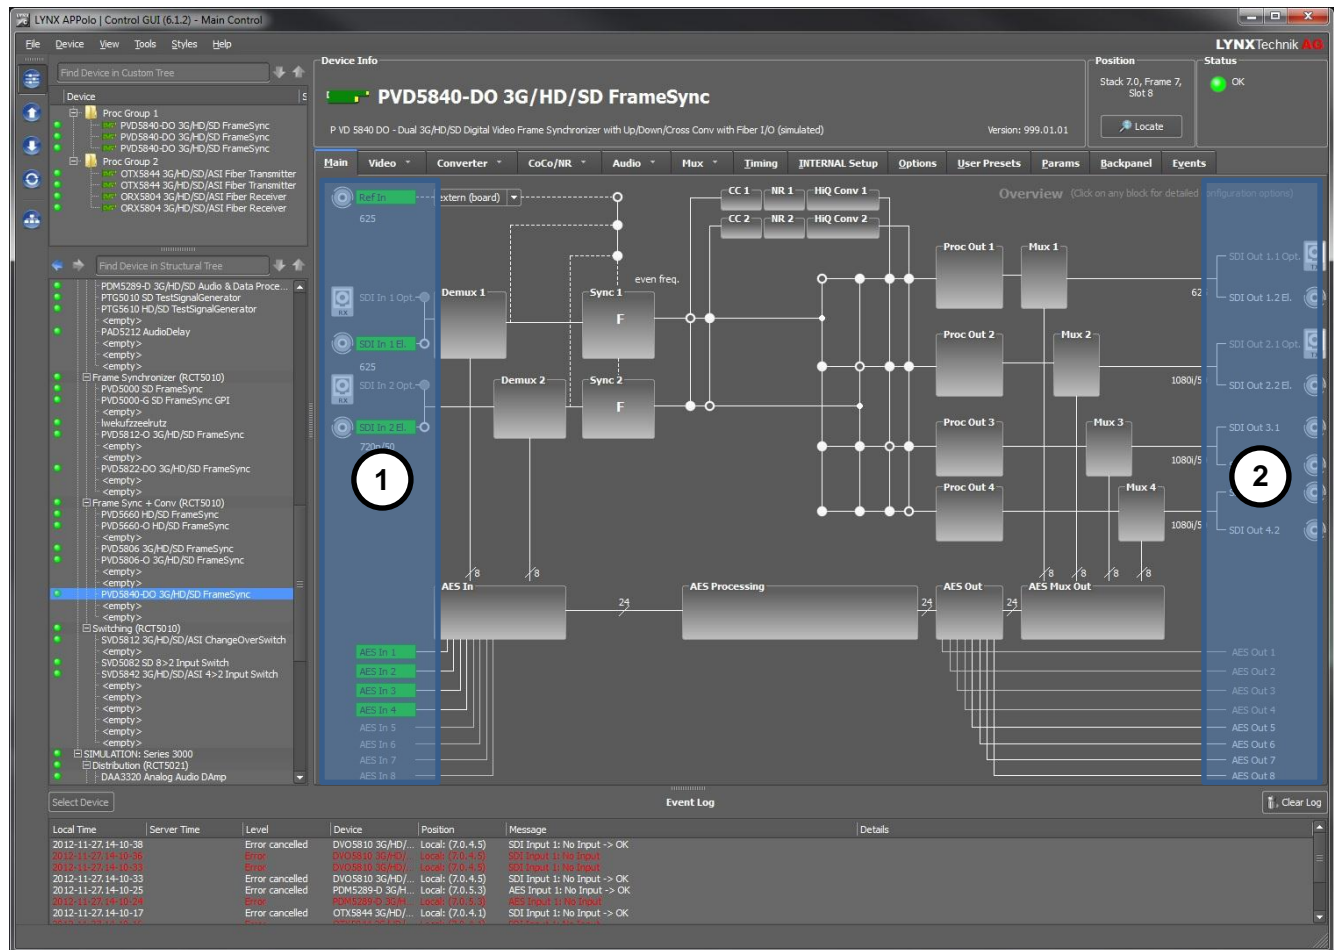

This provides an intuitive and logical method to access specific areas of the device.

For example, the previous image represents the graphical user interface of the PVD 5840 Frame Synchronizer which is one of our more complex devices.

The user can navigate around the module by clicking on a specific processing box in the diagram, or clicking on the associated tab at the top of the screen. This opens the settings and parameters which are available for adjustment at this level.

You will also note from the screen shot above that the signal inputs (1) are highlighted with colors; this indicates the condition of the input. Green is OK, yellow indicates a possible conflict or problem, and red means not present.

The input (1) as well as the output (2) names can be customized to fit you installation. Simply right click onto the designated input or output entry and select "Rename".

System Events

The APPolo Control System software includes its own error logging system, which can be seen at the bottom of the GUI.

The screenshot displays the LYNX APPolo Control GUI (6.1.2) - Main Control window. The interface is divided into several sections:

- Left Panel:** A hierarchical tree of devices. The selected device is "PVD5840-DO 3G/HD/SD FrameSync".
- Top Right:** Device information for "PVD5840-DO 3G/HD/SD FrameSync". It shows the position as "Stack 7.0, Frame 7, Slot 8" and the status as "OK".
- Central Panel:** A configuration area for the selected device. It includes tabs for "Main", "Video", "Converter", "CoCo/NR", "Audio", "Flux", "Timing", "INTERNAL Setup", "Options", "User Presets", "Params", "Backpanel", and "Events". The "Events" tab is currently active, showing a table of event notifications.
- Bottom Panel:** An "Event Log" section showing a list of events. The log includes columns for "Local Time", "Server Time", "Level", "Device", "Position", and "Message".

The "Event Log" table shows the following data:

| Local Time | Server Time | Level | Device | Position | Message |
|---------------------|-------------|-----------------|-------------------|------------------|-----------------------------|
| 2012-11-27 14:10:38 | | Error cancelled | DVOS810 3G/HD/... | Local: (7.0.4.5) | SDI Input 1: No Input -> OK |
| 2012-11-27 14:10:38 | | Error | DVOS810 3G/HD/... | Local: (7.0.4.5) | SDI Input 2: No Input -> OK |
| 2012-11-27 14:10:38 | | Error | DVOS810 3G/HD/... | Local: (7.0.4.5) | SDI Input 3: No Input -> OK |
| 2012-11-27 14:10:33 | | Error cancelled | DVOS810 3G/HD/... | Local: (7.0.4.5) | SDI Input 1: No Input -> OK |
| 2012-11-27 14:10:25 | | Error cancelled | PDMS289-D 3G/H... | Local: (7.0.5.3) | AES Input 1: No Input -> OK |
| 2012-11-27 14:10:17 | | Error | OTXS804 3G/HD/... | Local: (7.0.4.1) | SDI Input 1: No Input -> OK |

Every module can be configured for the events the user wishes to log. This is to prevent the log being filled with unnecessary clutter. There will be circumstances where for example an input video signal will routinely go missing as the input sources are frequently changed – and for the given application this behavior is considered normal. In this case you can disable the logging of the event on the module. Likewise, you may only want to log when a specific event happens, and not when it's corrected. For example you want to log when a signal goes missing, but are not interested in logging when the signal returns.

Every module has an "events" tab where the error reporting can be configured for each individual module. See the screen shot below for an example of recordable events for the PVD 5840 Frame Synchronizer.

It is also possible to configure the SNMP traps sent to an external monitoring or logging device in the same way. In the screen shot above SNMP is grayed out because the option OC_RSL_CTRL is not activated (OH_RCT5023_SERVER is required for SNMP feature).

Backup Solutions

With some of the more complex modules having upwards of 1000 parameters which can be set by the user, some form of backup policy is vital. While the module settings are always stored in non-volatile Flash RAM (which will survive power failures) it does not protect against hardware failure which requires the device to be exchanged for a new unit. Exchanging the hardware would require all the settings be manually reset, assuming the settings were actually documented somewhere. LYNX provides two backup solutions.



Hotsync Backup

Part of the basic free software package is what we refer to as "Hotsync Backup". This is designed primarily to address the issues mentioned above with regards to maintenance and protection against hardware failure. While included with the basic software package it is not actually a function of the control system software at all (aside from switching it on). The Hot Sync Backup feature is a function of the individual R CT 5023 controller cards installed in each rack frame. When enabled for the specific controller it will immediately take an inventory of the modules installed in the rack, and take a copy of all the modules settings which are backed up into the controller's own internal Flash RAM. When the module's settings are changed, the backup copy is immediately (and automatically) appended with the new settings - this ensures the module backup is always current and up to date. The system will detect when the module is removed and exchanged for a new unit, and will automatically restore the backup copy of the settings into the new module. This process only takes a few seconds. This is an ideal solution as there is no backup to initiate or schedule, and is 100% automatic always running in the background.

System Wide Backup

There may also be a need to backup a complete system configuration. This is addressed with the optional software plug in "Backup/Restore." This backup process is a function of the OH_RCT5023_SERVER and the settings are stored as a file (or backup set) on the server. Of course it is possible to export and import these backup files to and from the PC running the APPolo control software.


The Backup/Restore application is useful if the LYNX system is used for different applications (or sessions) and the system configuration needs to be globally changed on a regular basis. The screen shots below shows the backup and restore GUI screens.

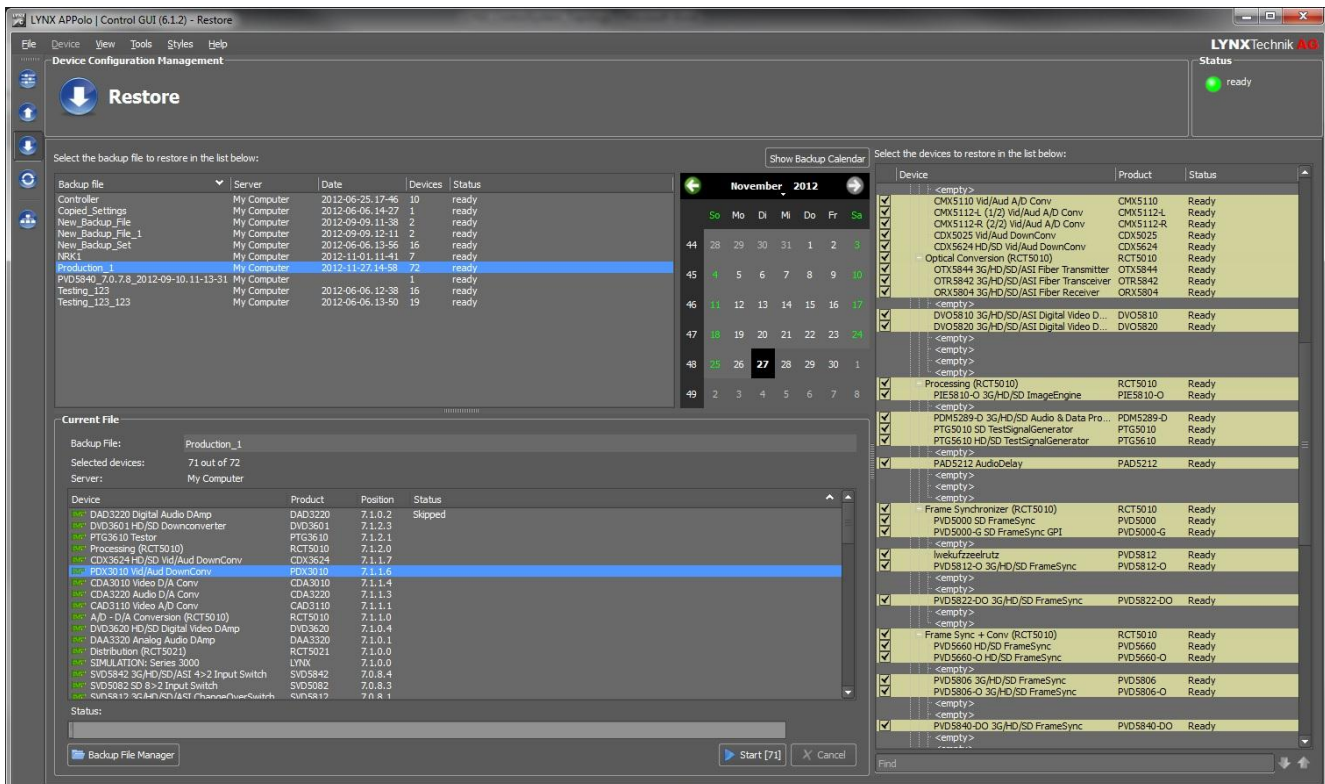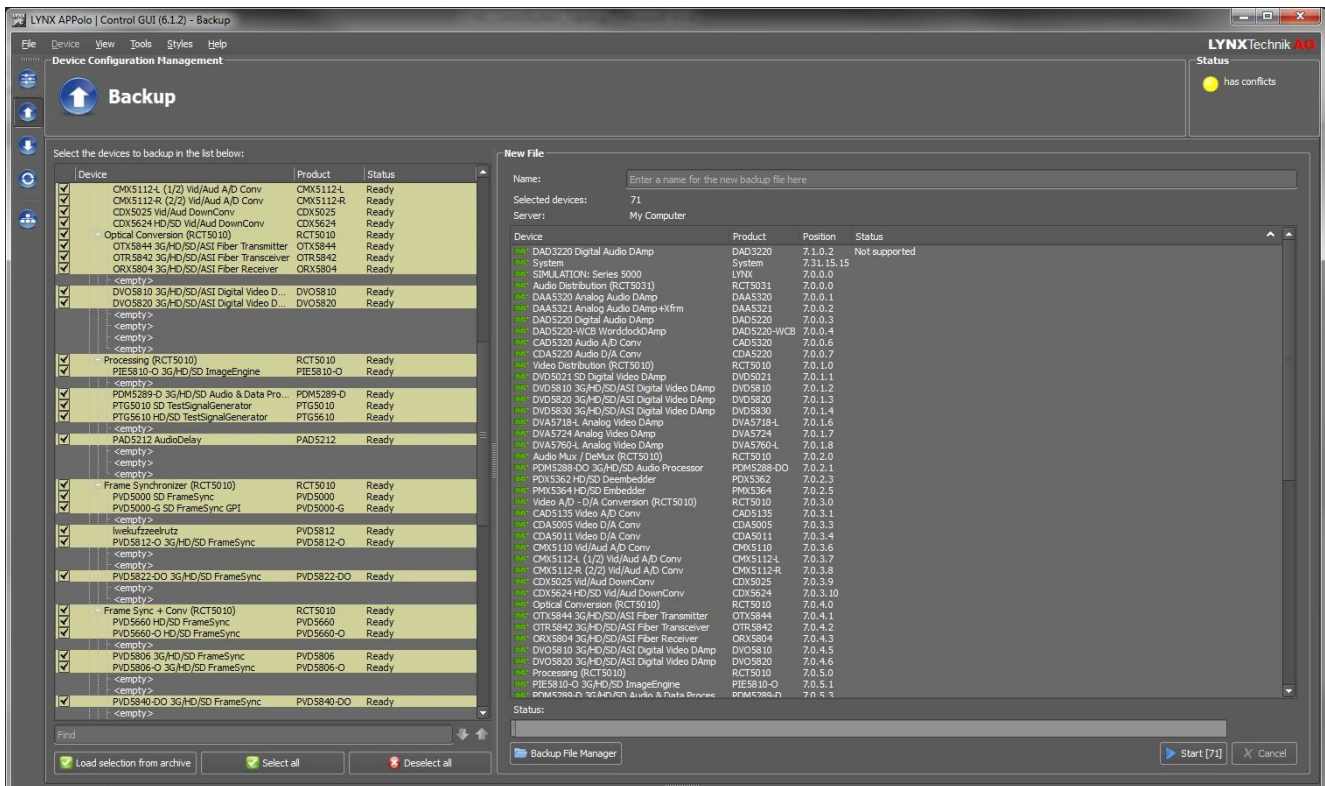

Copy & Paste

When working with a larger system it is likely that modules of the same type need to be setup in the same way. As the number of parameters of some modules can exceed 1000, setting up multiple modules can be extremely time-consuming. Specifically for this reason LYNX Technik AG included a copy & paste function into the APPolo control software.

Setup one of the modules as required, right click onto the device in the device tree and select "Copy Settings" in the "Settings Management" menu. Afterwards, simply right click onto the module you want to paste the settings to and select "Paste

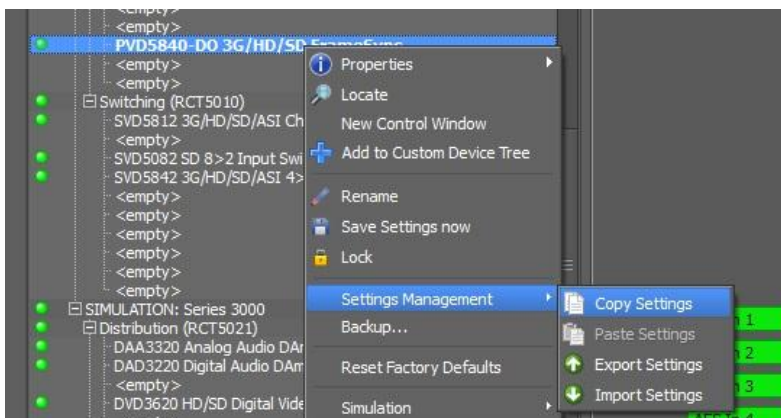

Settings" in the "Settings Management" menu.


User Access Control

In larger systems with multiple clients accessing the system, user access control may be an important consideration. As the control system provides free and unrestricted access to all module settings, accidental and unauthorized changes from operators can sometimes be problematic.


A layer of protection can be added with the User Access Control plug-in option for the control system. It allows an administrator to set up user accounts which are password protected and customize the level of access for each individual user. This can range anywhere from "monitor and view" only, to complete unrestricted access.

The administrator has complete control over the modules, the individual settings that are active, and what settings are locked out for each user.

Update Manager

One section of the APPolo GUI software is dedicated for the update of the modules. To open this section you can use the tool bar icon  or select "Update Manager" in the "Tools" menu.

To access the complete feature range of this GUI section, it is required to register your software. To register, open the help menu and select "Registration/Login". A wizard will guide you through the registration process.

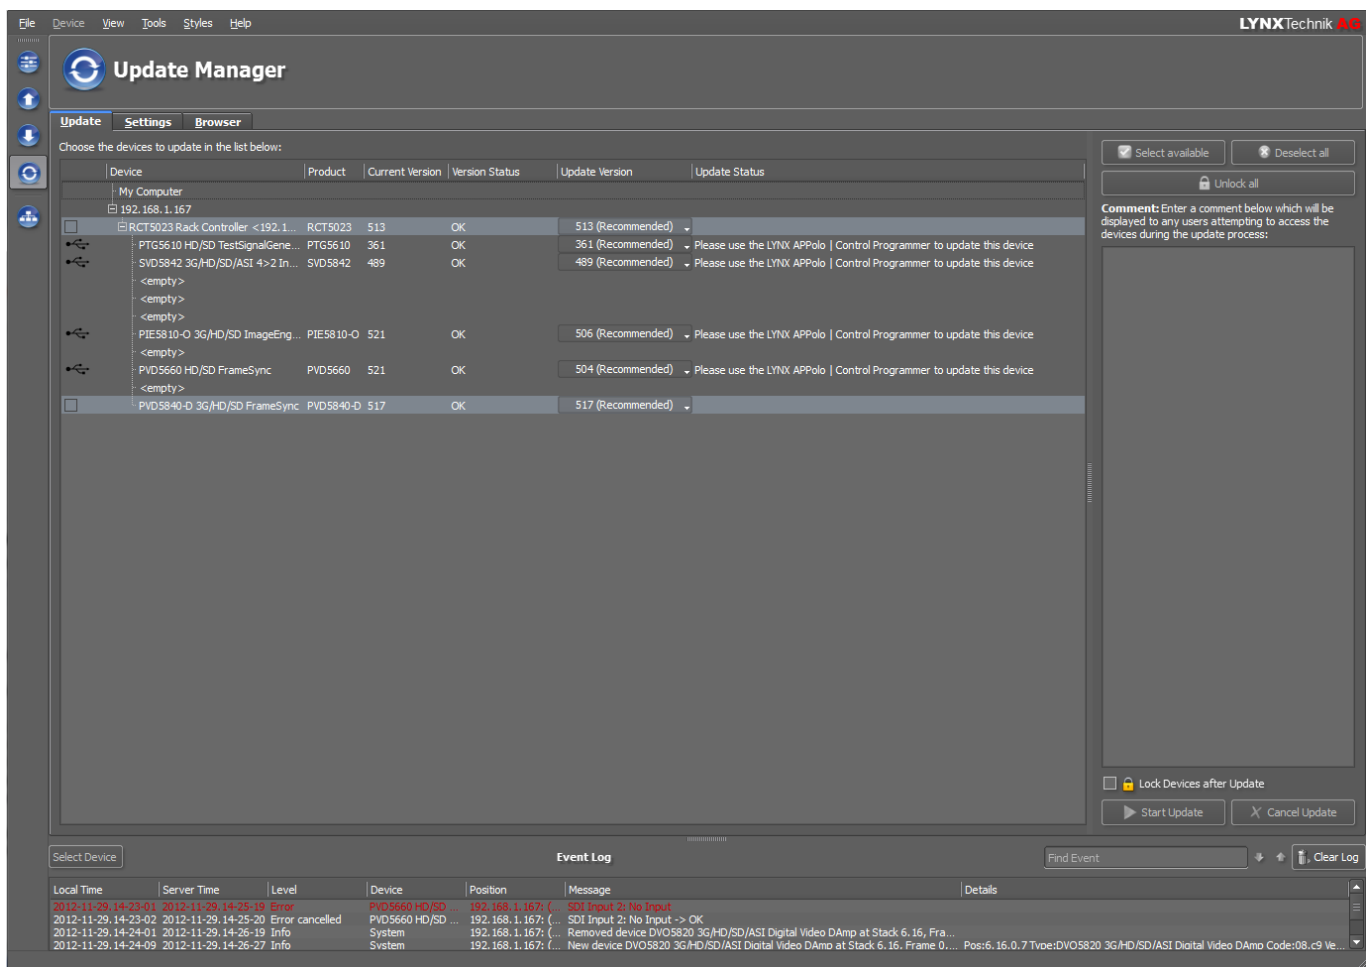

Update Manager

Update Settings Browser

Choose the devices to update in the list below:

| Device | Product | Current Version | Version Status | Update Version | Update Status |
|--|-----------|-----------------|----------------|-------------------|---|
| My Computer | | | | | |
| 192.168.1.167 | | | | | |
| <input type="checkbox"/> RCT5023 Rack Controller <192.1... | RCT5023 | 513 | OK | 513 (Recommended) | |
| <input type="checkbox"/> PTG5610 HD/SD TestSignalGene... | PTG5610 | 361 | OK | 361 (Recommended) | Please use the LYNX APPolo Control Programmer to update this device |
| <input type="checkbox"/> SVD5842 3G/HD/SD/ASI 4x2 In... | SVD5842 | 489 | OK | 489 (Recommended) | Please use the LYNX APPolo Control Programmer to update this device |
| <input type="checkbox"/> <empty> | | | | | |
| <input type="checkbox"/> <empty> | | | | | |
| <input type="checkbox"/> PIE5810-O 3G/HD/SD ImageEng... | PIE5810-O | 521 | OK | 506 (Recommended) | Please use the LYNX APPolo Control Programmer to update this device |
| <input type="checkbox"/> <empty> | | | | | |
| <input type="checkbox"/> PVD5660 HD/SD FrameSync | PVD5660 | 521 | OK | 504 (Recommended) | Please use the LYNX APPolo Control Programmer to update this device |
| <input type="checkbox"/> <empty> | | | | | |
| <input type="checkbox"/> PVD5840-D 3G/HD/SD FrameSync | PVD5840-D | 517 | OK | 517 (Recommended) | |

☐ Select available ☐ Deselect all

☐ Unlock all

Comment: Enter a comment below which will be displayed to any users attempting to access the devices during the update process:

☐ Lock Devices after Update

Event Log

| Local Time | Server Time | Level | Device | Position | Message | Details |
|---------------------|---------------------|-----------------|-------------------|---------------|---|---------|
| 2012-11-29 14:23:01 | 2012-11-29 14:25:19 | Error | PVD5660 HD/SD ... | 192.168.1.167 | SDI Input 2: No Input | |
| 2012-11-29 14:23:02 | 2012-11-29 14:25:20 | Error cancelled | PVD5660 HD/SD ... | 192.168.1.167 | SDI Input 2: No Input -> OK | |
| 2012-11-29 14:24:01 | 2012-11-29 14:26:19 | Info | System | 192.168.1.167 | Removed device DVO5820 3G/HD/SD/ASI Digital Video DAmp at Stack 6.16. Fra... | |
| 2012-11-29 14:24:09 | 2012-11-29 14:26:27 | Info | System | 192.168.1.167 | New device DVO5820 3G/HD/SD/ASI Digital Video DAmp at Stack 6.16. Frame 0. Pos:6.16.0.7 True:DVOS820 3G/HD/SD/ASI Digital Video DAmp Code:08.c9 Ve... | |

The "Update Manager" provides the possibility to mirror our complete database of programming files onto your local PC and keeping it up-to-date by synchronizing it via Internet. The intuitive user interface makes it really easy to overview the current release versions of your modules and also to see if new ones are available. Due to the local database you can not only read the release notes of the new firmware version before upgrading but can browse all the releases of all products and read the release notes of each individual one.

Test Drive the Control System

A thorough explanation of the APPolo Software as it relates to all functions and modules is beyond the scope of this document. Using the application for yourself will make it apparent how intuitive and easy to use the software is.

The LYNX APPolo Control Software Application can be downloaded for free from the LYNX Technik AG website - download the file onto your desktop and click to install - http://download.lynx-technik.de/public/c3_local/

When the application has started you can select "Device Simulation" in the "View" menu. Once selected the device browser will populate itself with a simulated system (much the same as it would during the discovery process if actual hardware was connected) of our current product range. This essentially gives you a fully simulated system with no actual hardware attached. The application is fully functional; you can browse through all the LYNX modules, change settings and even simulate system events (or error conditions) in the events tab.

If you have questions or need additional help configuring the control system for a specific installation or applications please feel free to contact LYNX Technik, and we will be more than happy to assist.

© 2012 **LYNXTechnik AG** – All rights reserved

Information in this document is subject to change without notice. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical for any purpose, without express written permission of LYNX Technik AG.

LYNX Technik AG may have patents, patent applications, trademarks, copyrights or other intellectual property rights covering the subject matter in this document. Except as expressly written by LYNX Technik AG, the furnishing of this document does not give you any license to patents, trademarks, copyrights or other intellectual property of LYNX Technik AG or any of its affiliates.

Headquarters

LYNX Technik AG
Brunnenweg 3
D 64331 Weiterstadt
Germany
PH: +49 (0) 6150 1817 0
FX: +49 (0) 6150 1817 100
web: www.lynx-technik.com
email: info@lynx-technik.com

US Office

LYNX Technik Inc.
26366 Ruether Ave
Santa Clarita, CA 91350
USA
PH: +1 661 251 8600
FX: +1 661 251 8088
web: www.lynx-technik.com
email: infousa@lynx-technik.com


Asia Office

190 Middle Road
19-05 Fortune Centre
Singapore 188979
PH: +65 6826 1000
FX: +65 6826 1007
web: www.lynx-technik.com
email: joehant@lynx-technik.com

ANNEX A


Integration in to a legacy installation

If you already own a LYNX Technik Series|5000 installation, you are probably wondering how you can expand your current system that is using the legacy controllers R CT 5031, R CT 5021 and R CT 5010 with the new R CT 5023 controller card. As a matter of fact, this is really simple but first things first. Below is an image showing the setup and connections of a legacy installation.

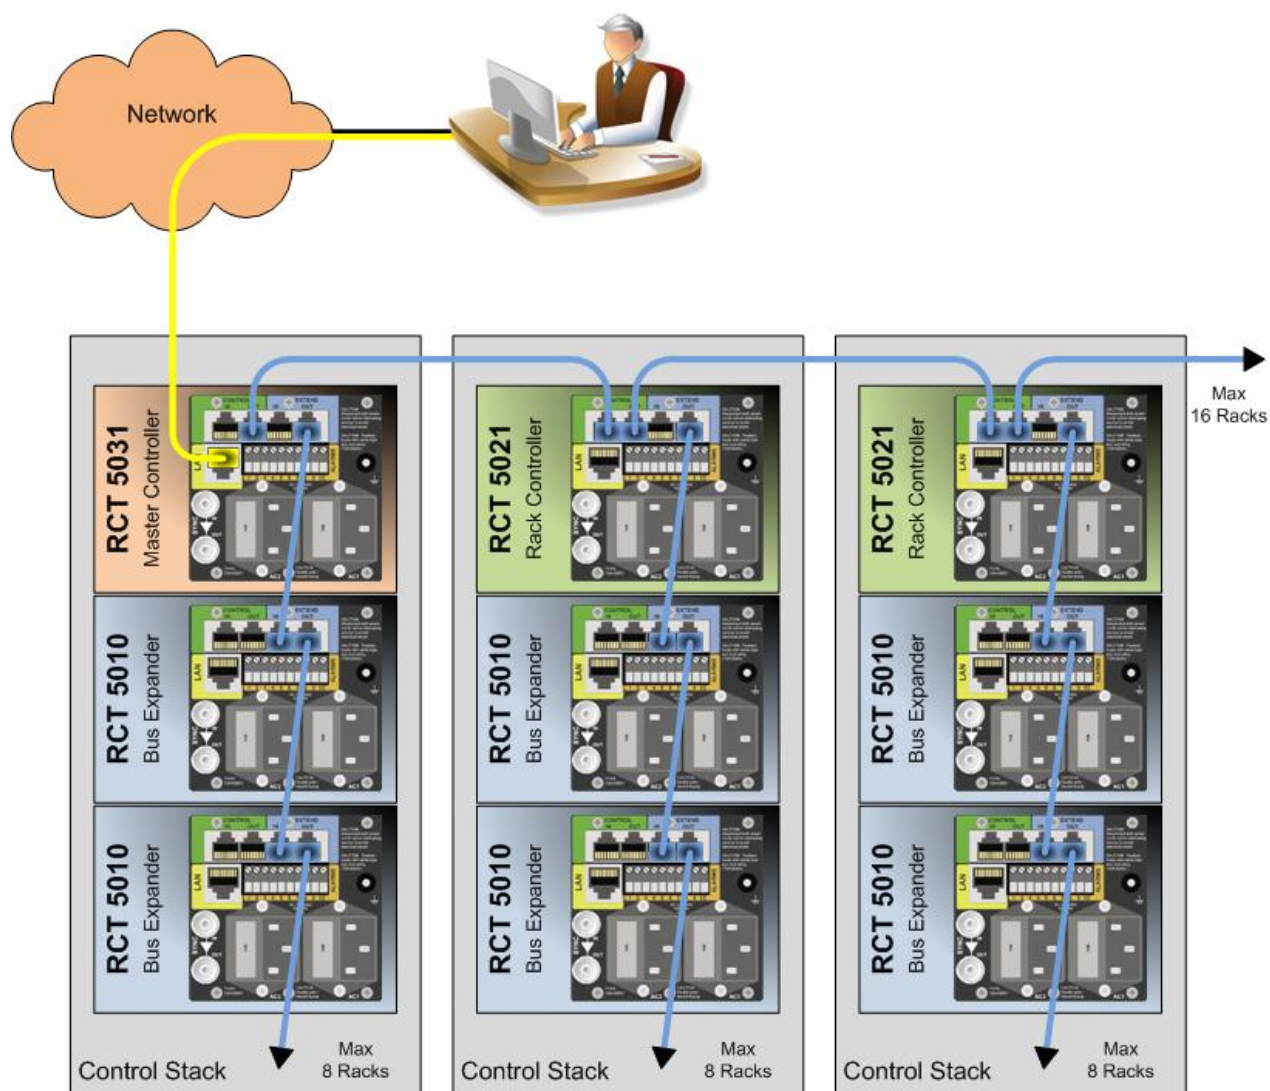

The frame with the R CT 5031 controller is the only one that is connected to the network. All the other frames with R CT 5021 and R CT 5010 controller cards have a serial interconnection to the R CT 5031 frame.

The R CT 5023 doesn't provide a serial connection, therefore the only way to add a frame with this controller card to the system is via network. If you open the "Network Connections Editor" tab of the "Connection Manager" dialogue, you will notice that the R CT 5031 is represented as a server (i.e. bold font). This is because the R CT 5031 controller card has the server functionality of the OH_RCT5023_SERVER included. Due to this fact, adding R CT 5023 controller cards to your existing system is to simply attach these controllers to the R CT 5031 master controller as if you were attaching to the OH_RCT5023_SERVER (see chapter "Let's build a system with a server" for detailed descriptions).

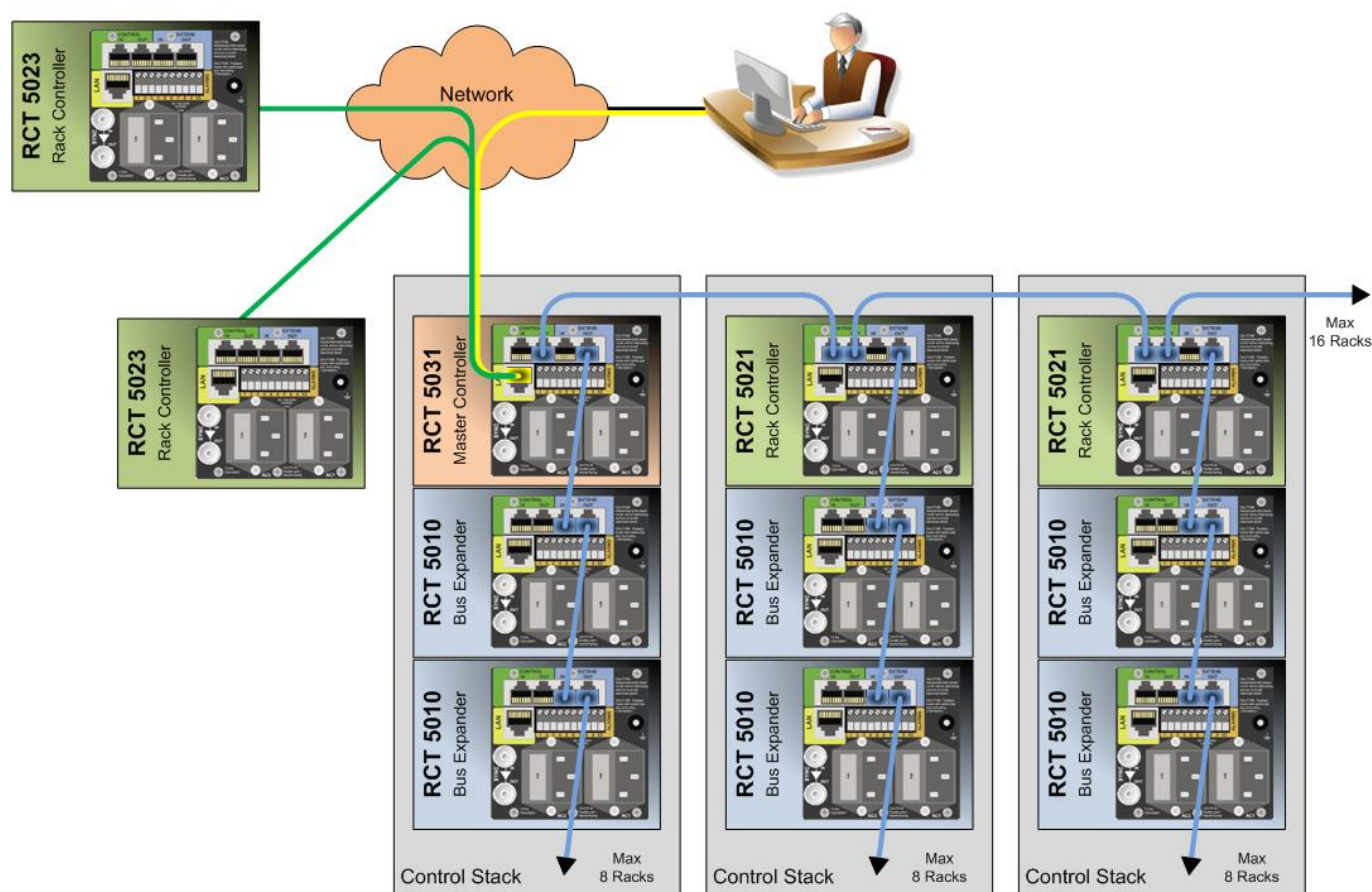

By the way, the R CT 5021 controller card also has the ability to be connected via network. In this mode it can be attached like an R CT 5023 controller to any server (i.e. OH_RCT5023_SERVER or R CT 5031).